MIDMARK®

Installation Instructions

153653-00X Monitor Arm Mount for LR or Console Units

KIT COMPONENTS

Part Number	Description	Qty
153653	Monitor Arm Mount w/o L/R Adapter	
• 029-2398-01	L/R Arm Assy.	1
153653-001	Monitor Arm w/ L/R Mount Adapter	
• 029-2398-01	L/R Arm Assy.	1
• 029-2696-00	L/R Mount Adapter	1
153653-002	Monitor Arm Mount for Console	
• 003-1225-00	Instructions	1

GENERAL INFORMATION

To provide a means to mount a Monitor Arm on a chair.
A chair with a ProCenter or Whip would use the 153653 Kit as a L/R Mount Adapter is already on the chair.
A chair without these accessories would use the 153653-001 Kit that would include the L/R Mount Adapter.
A chair that has a console would use the 153653-002 Kit. This Monitor Arm readily adapts to mounting on a console.
These instructions include installation of the L/R Mount Adapter. If your chair already has a L/R Mount Adapter installed, use only those steps that pertain to installation of the Monitor Arm.
If your chair requires console mounting refer to those instructions.

INSTALLATION

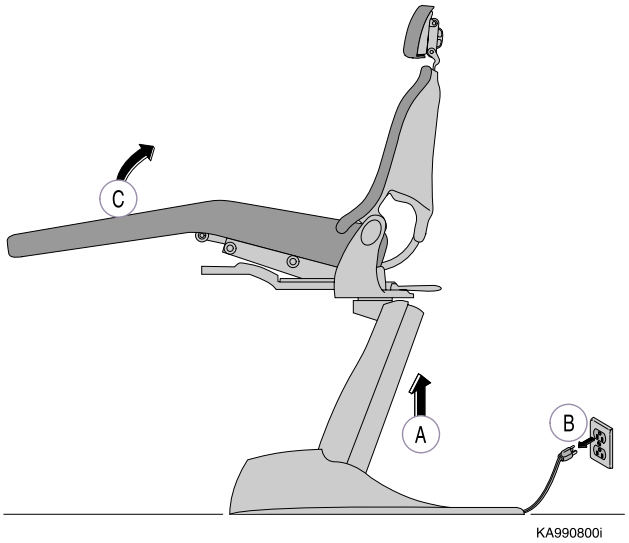

A. Raise chair to its highest position.

WARNING

Assure all electric, air and water supply is turned off or disconnected before working on the equipment. Failure to comply could result in serious personal injury.

B. Assure power is disconnected before continuing.

C. Lift seat upholstery up and secure in that position.

© Midmark Corporation - 2001

INSTALLATION (MIDMARK LR MOUNT ADAPTER)

A. Place L / R mount adapter in position beneath seat section on chairseat casting.

B. Loosely install 5/8" x 1 1/2" hex head bolt and lockwasher.

C. Install the two 1/4" x 3/4" hex head bolts.

D. Torque the 5/8" bolt 65 - 75 ft/lbs. (88-102 N•M).

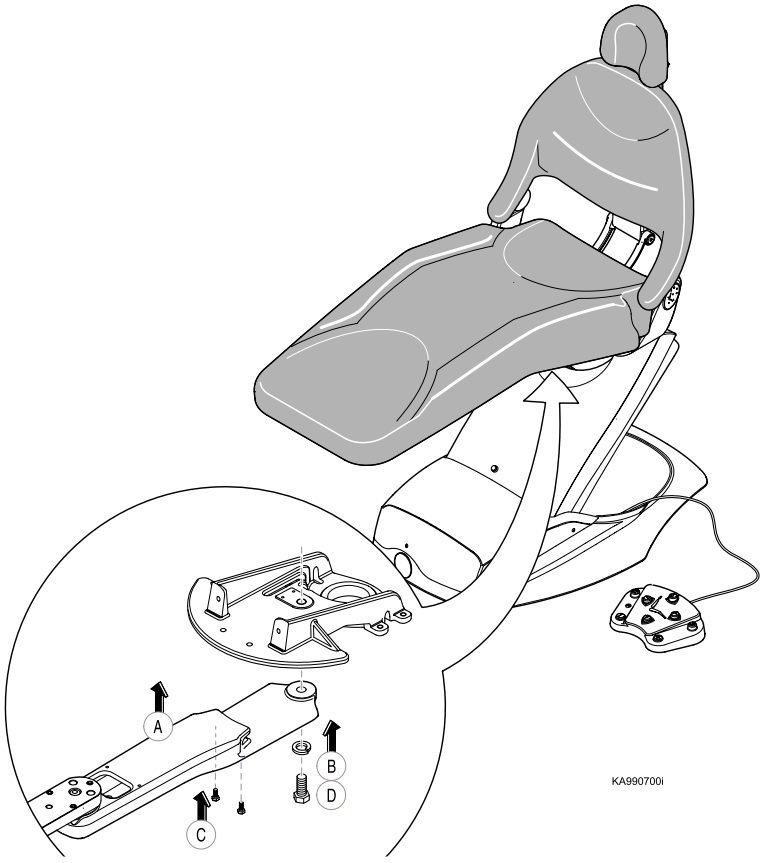

INSTALLATION (LR MONITOR ARM)

A. Position small spacer, thrust bearing, and two thrust washers on L/R adapter.

B. Position Monitor Arm Assembly on L/R adapter.

C. Install bolt, large spacer, small spacer, two thrust washer, and thrust bearing.

NOTE

Torque the bolt to 110 to 130 ft-lbs (149 to 176 N•M).

D. Secure cap to bolt head with adhesive tape.

E. Insert Monitor Tube assembly into Monitor Arm.

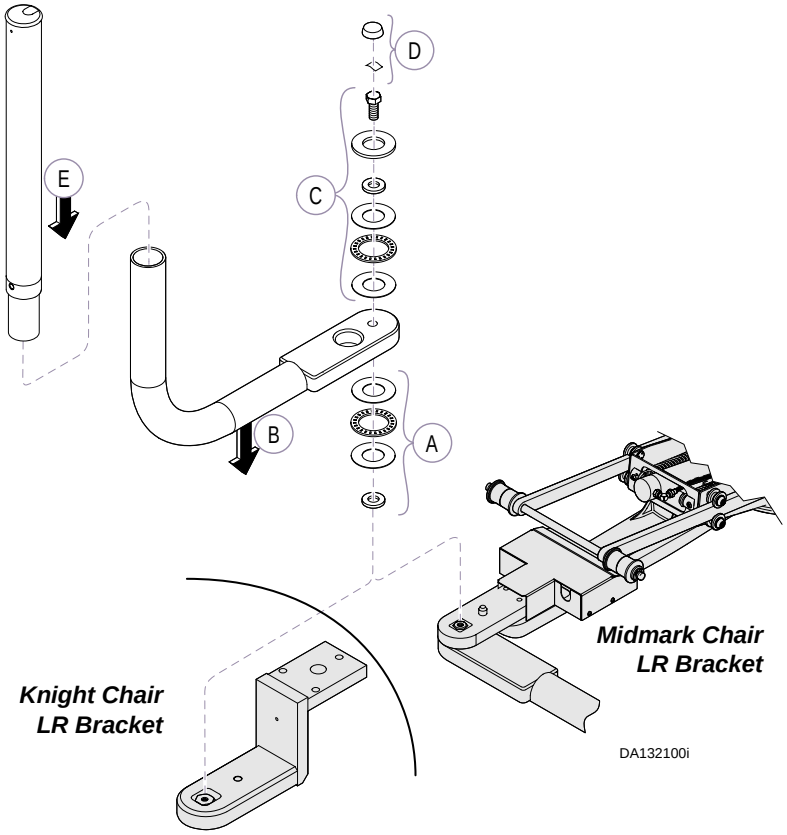

© Midmark Corporation - 2001

INSTALLATION (CONSOLE MONITOR ARM)

A. Remove the console side cover by gently pulling outward.

B. Remove the plastic hole plug.

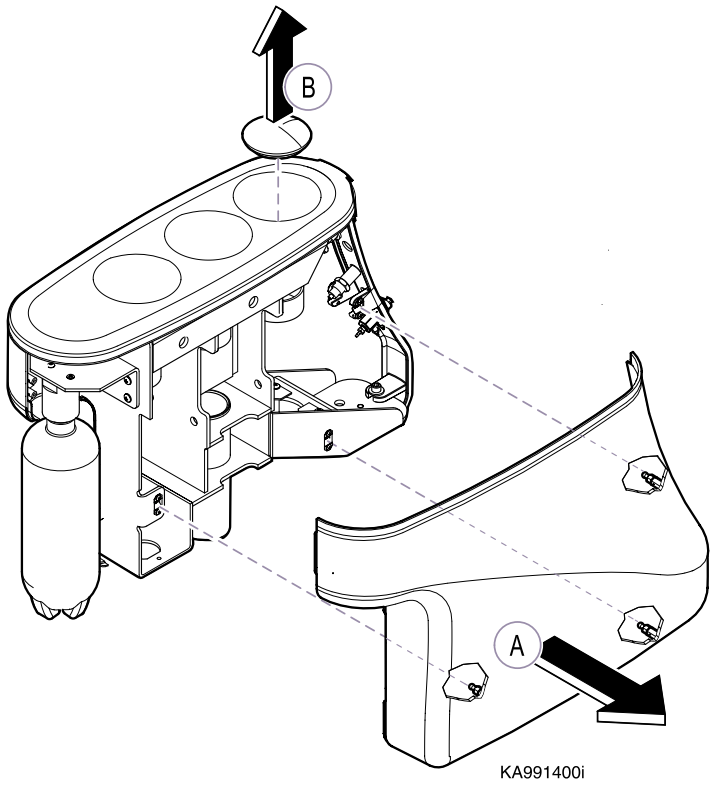

INSTALLATION (CONSOLE MONITOR ARM)

A. Position console bearing assembly so the three mounting holes are aligned with the holes in the console and the two set screws are aligned toward the side or with the access holes in the side of the console.

B. Secure the bearing assembly with three screws.

C. Slide the trim ring and bearing washer onto the monitor arm mount.

D. Insert the monitor arm mount into the console bearing assembly.

NOTE

There are two possible positions for the rotation stop screw, one for right side console mount and the other for left side. Verify proper operation before installing stop screw.

E. Install stop screw and check operation.

F. To adjust “drag” (tension when rotated) of monitor arm, insert 1/8" allen wrench and loosen / tighten two side set screws.

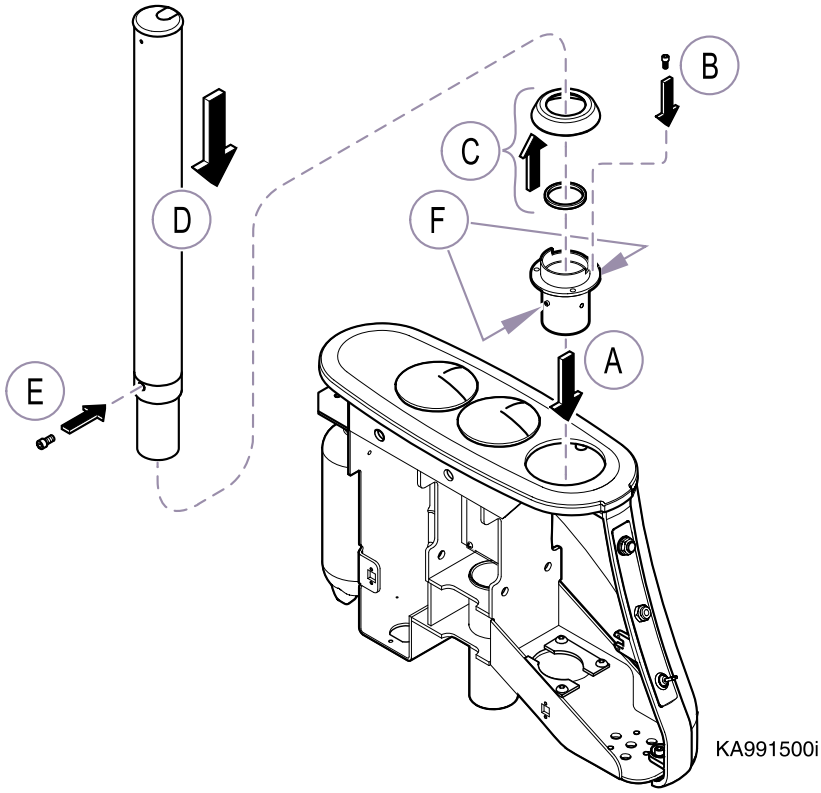

© Midmark Corporation - 2001

Print on Plain White Paper (Part No. 122919)

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

© Midmark Corporation - 2001